



Operation and Safety

Loading Ramps

Aluminum Folding with Handles
8' Extended—4' Folded

WARNING

SAFETY PRACTICES:



Inspect Ramps daily
before use.

DANGER

Do Not over load Ramps,
Weight to be distributed evenly.

Weight Capacity

- 1200 lbs. per ramp
- 2400 lbs. per pair

Beware when ramps are in use
to stay clear of equipment roll-
ing towards you.

Beware of wet and slippery sur-
faces, do not use under these
conditions.


Be sure both ends of ramps are
securely and completely level
when in use.



Use Caution. Keep
ramps away from
electrical Hazards.

Be sure ramps are used on
solid ground, do not use in sand
or on soft soil.

Instructions for Using Ramps

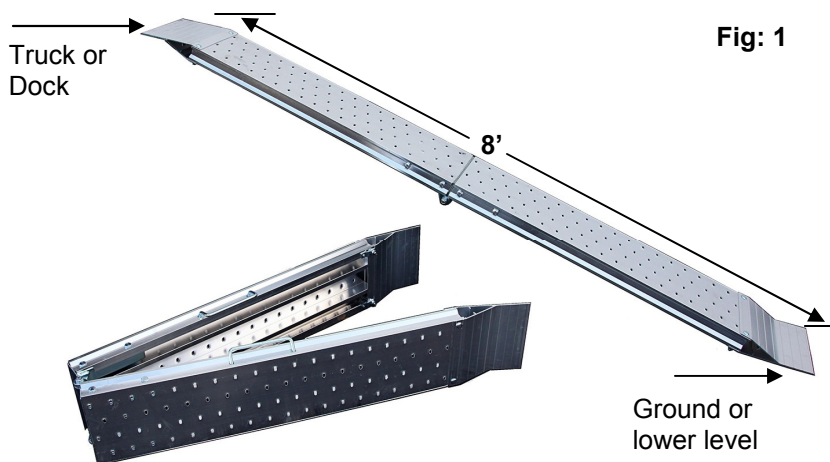

| Step | Action |
|------|---|
| 1 | Remove Ramps from carton or box. |
| 2 | Before use; first inspect ramps for any dam- age, bent parts or damage to hinge. |
| 3 | Unfold ramps and apply proper end to truck or dock and other end to ground or lower level. (As shown in fig. 1) |
| 4 | Be sure load is evenly distributive and does not exceed 1200 lbs per ramp (2400 lbs per pair). |
| 5 | Ramps ends need to be secure and level at contact to truck/dock & ground/lower level. |